


INSTRUCTIONS FOR CREATING AN EYE SPLICE



STEP 1

Singe end of rope over match flame to prevent unravelling.

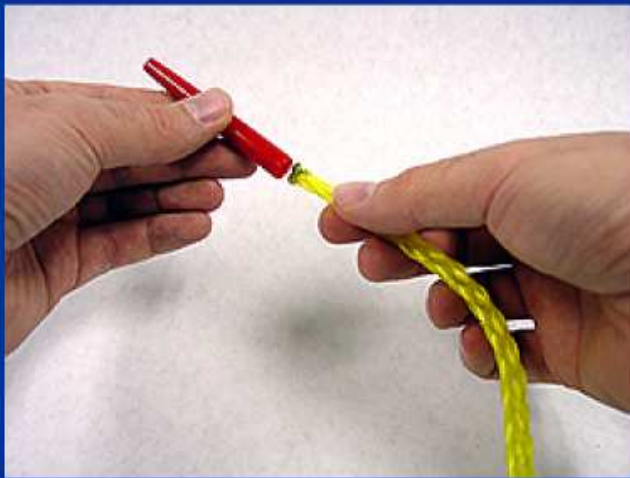

STEP 2

Take singed end of rope and insert into fid. Determine the size of the eye and take 6" more rope. Insert fid through rope at this point.



STEP 3

Insert fid between sections of rope. Fid with rope can be easily passed up center of primary rope.



STEP 4


When eye is proper size, remove fid through rope leaving secondary end completely covered. Spliced section should be at least 6" in length.



STEP 5

Draw hand over splice to smooth and tighten splice.


To make splice permanent, return fid to end of rope and place back through rope slightly below original exit point.

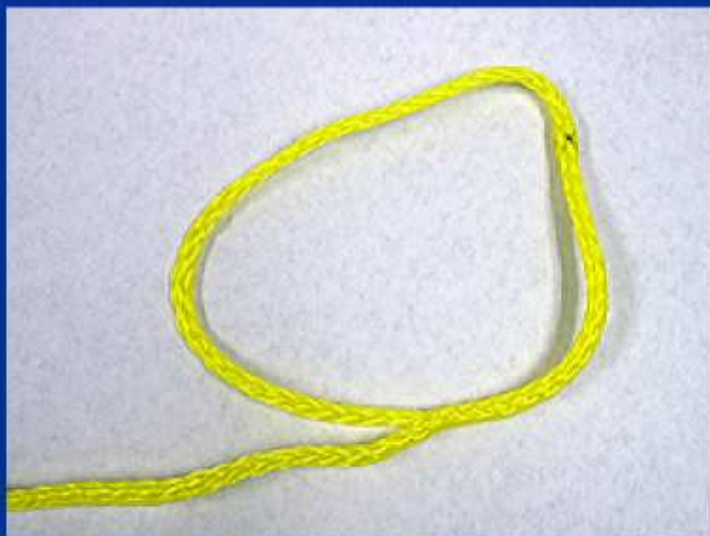

Your eye splice is now complete!


INSTRUCTIONS FOR CREATING AN END SPLICE

To better illustrate these instructions, we used two different colors of rope and refer to them as "primary" and "secondary."

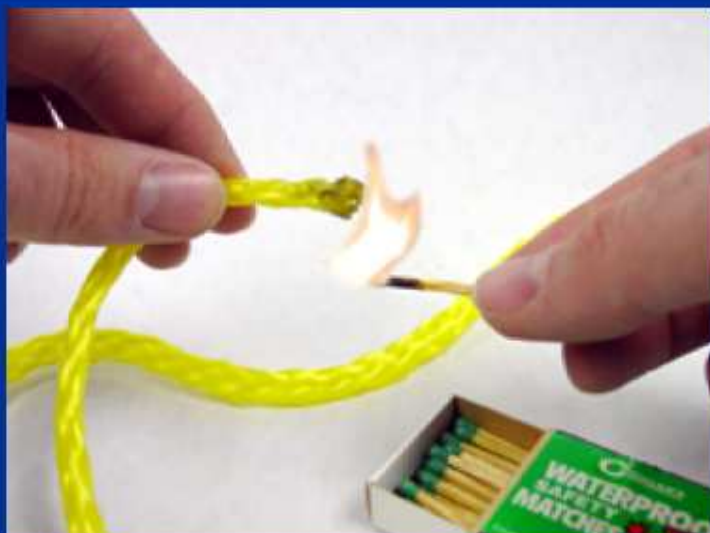

STEP 1

Singe ends of rope over match flame to prevent unravelling.

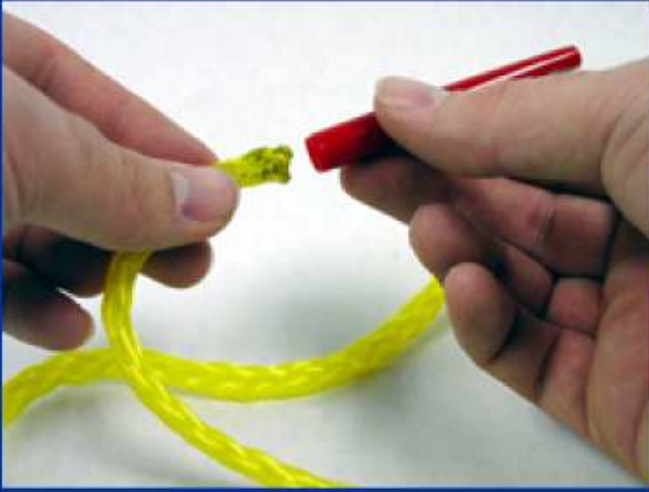


STEP 2

Take singed end of primary rope and insert into fid.




STEP 3

Enter fid through secondary rope 6" from end.

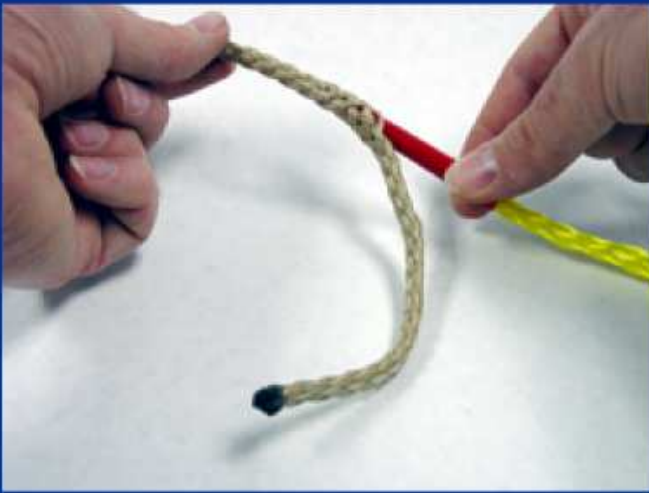


STEP 4

Pass fid through center of secondary rope.

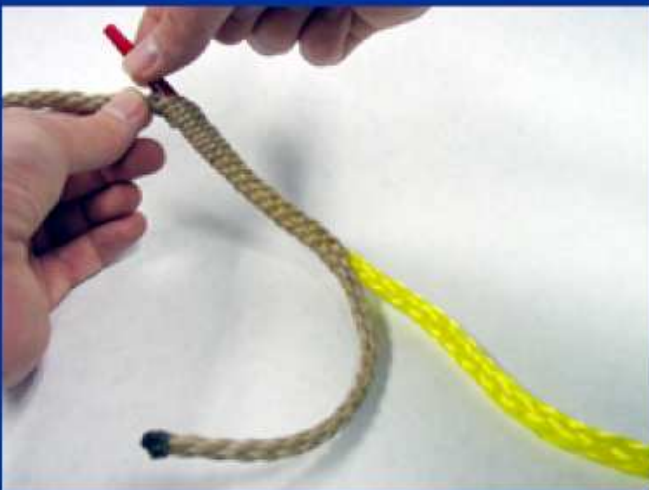

STEP 5

Remove fid, leaving end of primary rope buried in secondary rope.

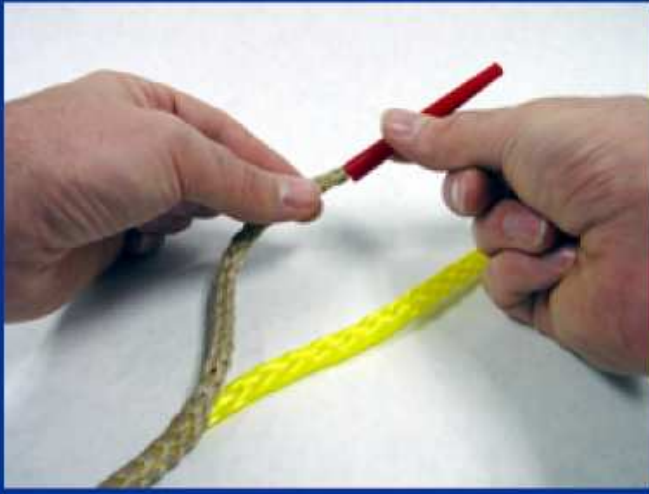

STEP 6

Insert the 6" tail of secondary rope into fid.



STEP 7

Insert fid into primary rope close to the exit point of the secondary rope.



STEP 8

Pass fid through center of primary rope as far as possible. Remove fid leaving end buried.



Draw hand over splice to smooth and tighten.

Your end splice is now complete!